


# 5107312FS / MAIN WIRE HARNESS - BRIGGS & STRATTON 61347 ENGINES

5107312A

(If internal schematic of the switch is not shown, the image of the switch represents the back view of the connector as it is connected to the switch.)

IGNITION SWITCH		
POSITION	CONTACT 1	CONTACT 2
1. OFF	M+G+A1	N/A
2. RUN 1	B+A1	L+A2
3. RUN 3	B+A1	N/A
4. START	B+S+A1	N/A

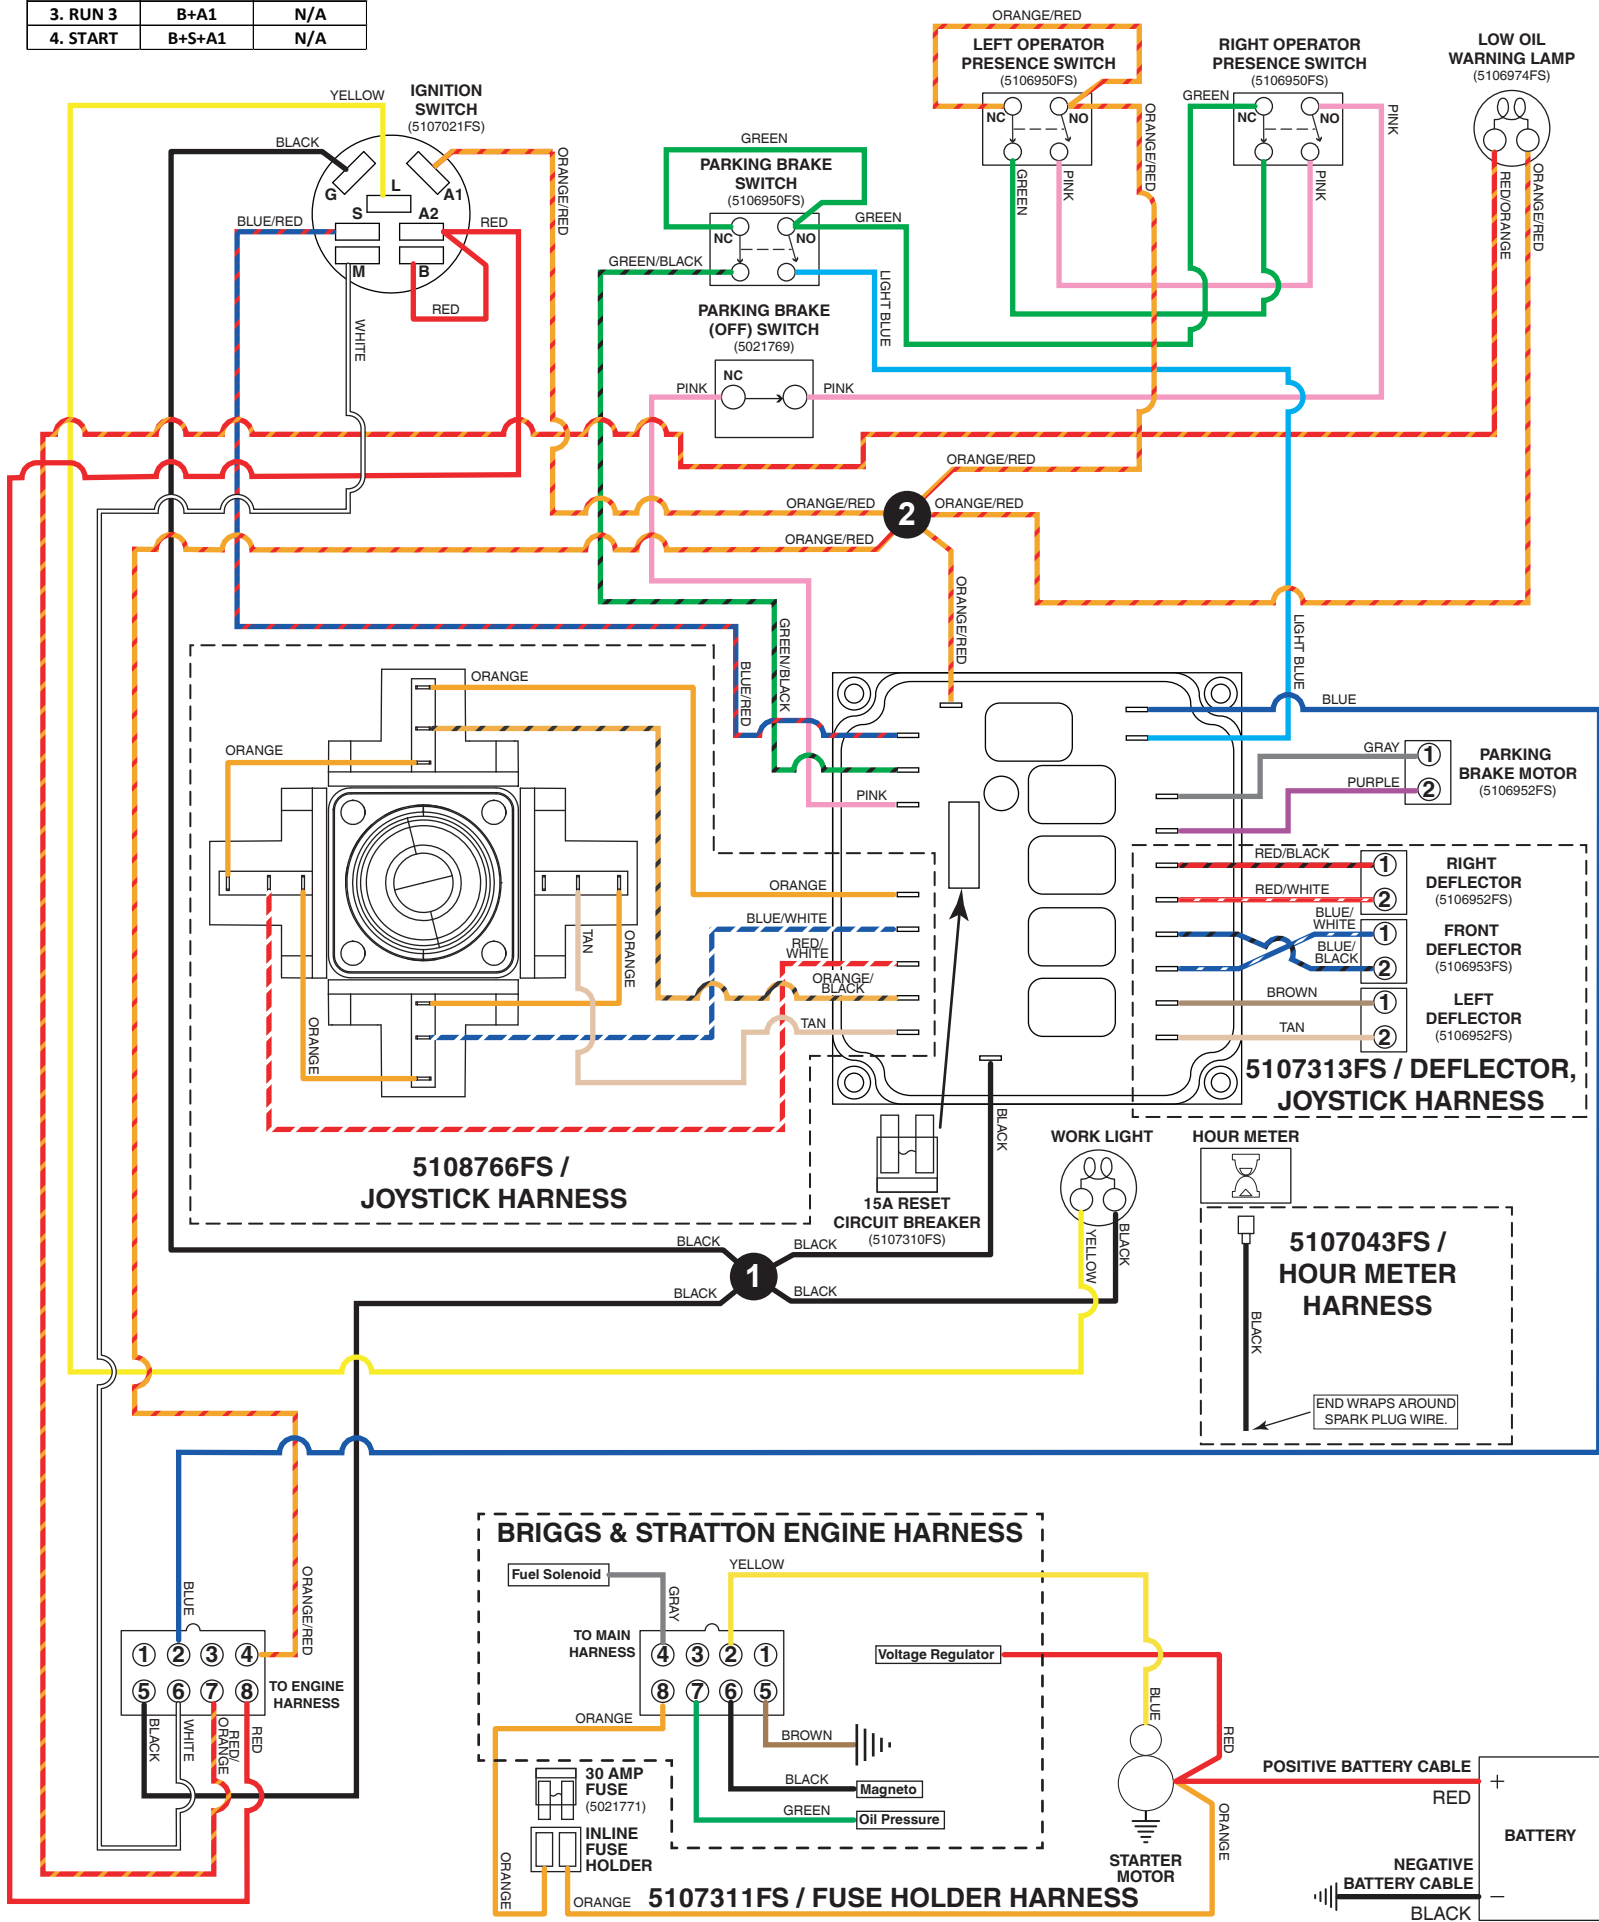

**IGNITION SWITCH**  
(5107021FS)

**LEFT OPERATOR PRESENCE SWITCH**  
(5106950FS)

**RIGHT OPERATOR PRESENCE SWITCH**  
(5106950FS)

**LOW OIL WARNING LAMP**  
(5106974FS)

**PARKING BRAKE SWITCH**  
(5106950FS)

**PARKING BRAKE (OFF) SWITCH**  
(5021769)

**5108766FS / JOYSTICK HARNESS**

**15A RESET CIRCUIT BREAKER**  
(5107310FS)

**5107313FS / DEFLECTOR, JOYSTICK HARNESS**

**5107043FS / HOUR METER HARNESS**

**BRIGGS & STRATTON ENGINE HARNESS**

Fuel Solenoid

Voltage Regulator

**30 AMP FUSE**  
(5021771)

**INLINE FUSE HOLDER**

**5107311FS / FUSE HOLDER HARNESS**

WORK LIGHT

HOUR METER

STARTER MOTOR

**POSITIVE BATTERY CABLE**

RED +

**NEGATIVE BATTERY CABLE**

BLACK -

**BATTERY**

END WRAPS AROUND SPARK PLUG WIRE.