



DL EXHAUST DEFLECTOR KIT 812295



BILLY GOAT DEBRIS LOADER

FOR DL MODELS 12/13/18/25

ASSEMBLY

1. Using the deflector as a template, position it so that the holes are on the center of the exhaust and two inches back from the end. Mark the hole position, then using a 11/32 drill bit, drill through the metal on both sides.
2. Attach the deflector with the hardware provided. **Note:** the bolts should run from the inside out and the washers will be on the outside of the deflector. Do not over tighten the hardware.

Use a 11/32 drill bit to drill a hole on both sides of the exhaust chute

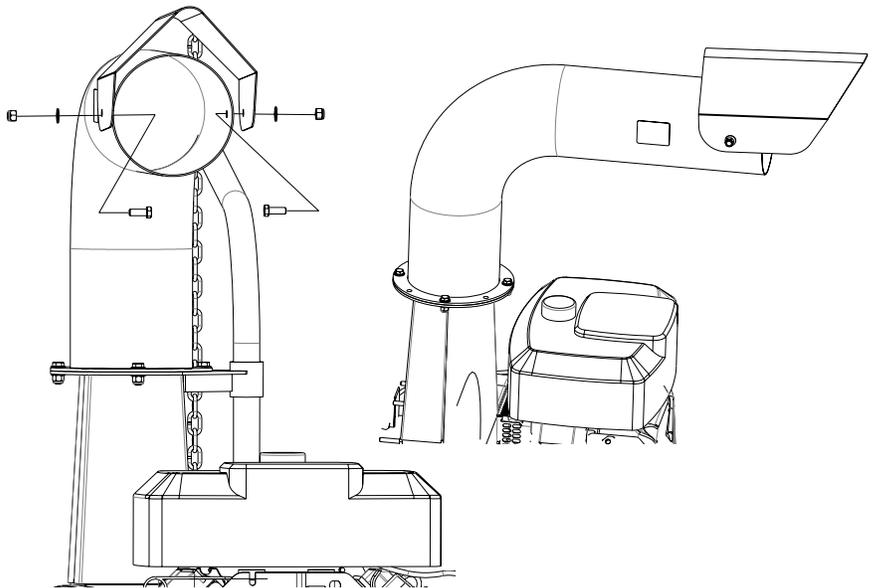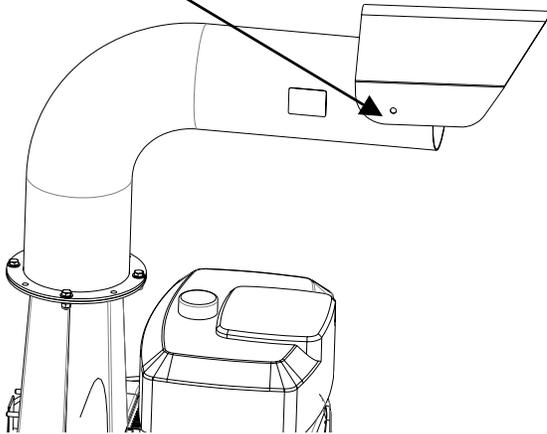

Item No.	Part No.	Description	Qty
1	812296	DEFLECTOR EXHAUST DL	1
2	8041029	SCREWCAP 5/16-18 X 1 1/4 HCS ZP	2
3	8171003	WASHER 5/16-18	2
4	8160002	NUT LOCK 5/16-18	2