




## 440120 HOLD DOWN KIT

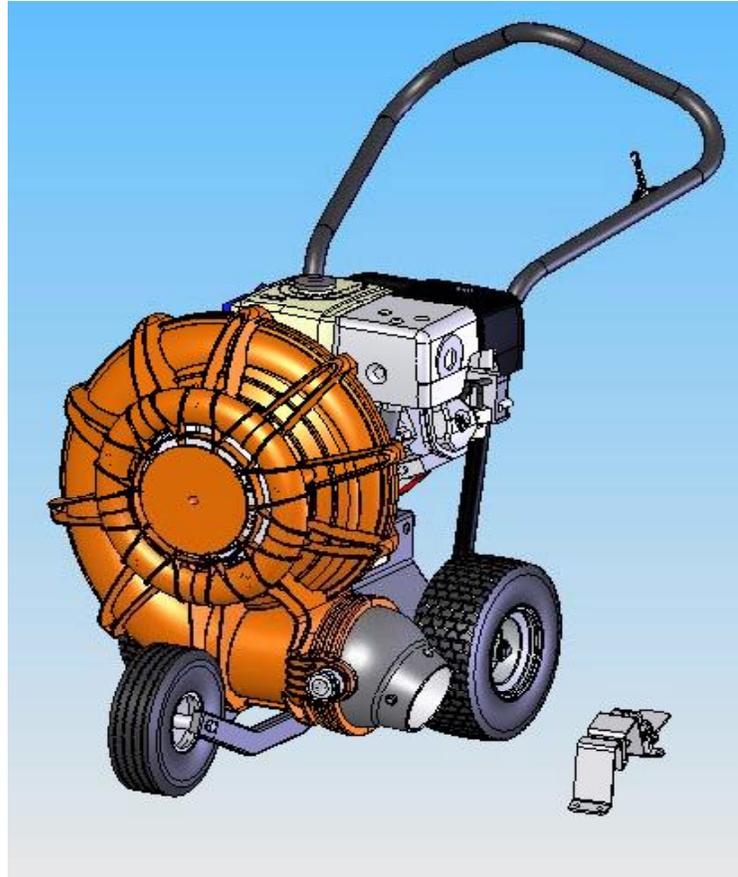

# BILLY GOAT FORCE BLOWER Hold Down Kit Manual

### ***HOLD DOWN KIT***

*To secure blower for transportation on trailer floors.*



**P/N 440120**




## 440120 HOLD DOWN KIT

**THANK YOU** for

purchasing a BILLY GOAT® *FORCE* Hold Down kit. This kit has been carefully designed and manufactured to provide years of reliable and productive service. This manual provides mounting instructions, and directions to secure your *FORCE* Blower in transport and to keep your unit in top running order. Read this manual carefully before assembling.

### ASSEMBLY

The Hold Down kit will be pre assembled. On older Force models (models with square tube forks) insert the mounting bolt (item #3) with washer (item #6) through the hole located behind the front tire on the frame, secure with the nut lock (item #4). Mount the Hold Down to a trailer or bed by first measuring and marking the holes for the lag screws then drilling the holes with a 1/4" drill bit. Then secure the Hold Down with the lag screws (item #2), and washers (item #5).

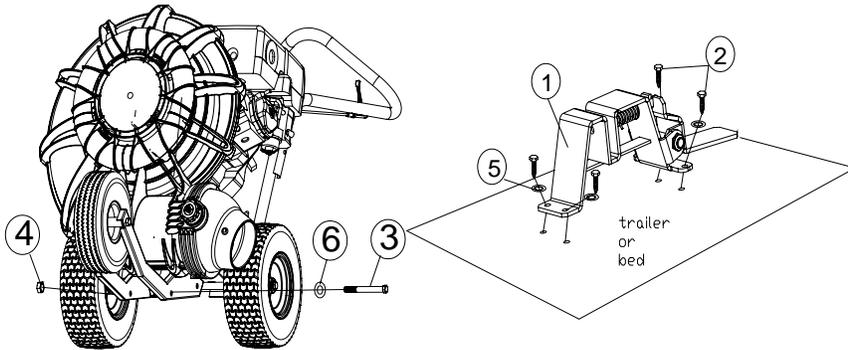

### Parts List

	Part No.	Description	Qty
1	440138	HOLD DOWN FORCE	1
2	520150	SCREW LAG 5/16X1.5"	4
3	8041235	BOLT 1/2-13X7" HCS ZP	1
4	8160005	NUT LOCK 1/2-13 HEX	1
5	8177011	WASHER LOCK 6/16" ST MED	4
6	8172011	WASHER FLAT 1/2" SAE ZP	1
	440120	HOLD DOWN KIT	1

To use the Hold Down, simply rest the bolt mounted previously behind the tire in the slot area that the pin will retract. Using your foot press the lever and lower the blower into the Hold Down unit gently until it rests at the bottom of the slot. To release simply reverse order used to Hold Down unit.

